

Vantage PRO2™ INSTALLATION DIAGRAM

Weather Envoy™ Retransmitting Data to a Vantage Pro2™ Console

This diagram shows a Vantage Pro2 sensor suite wirelessly connected to both a Vantage Pro2 console and Weather Envoy, which is connected to a computer via a WeatherLink data logger. The sensor suite is transmitting to the Weather Envoy. The Envoy is retransmitting the data to the console. The transmission distance between a sensor suite and Envoy, and between an Envoy and a console is up to 1000' (300 m) line-of-sight or up to 600' (180 m) through walls and other obstructions. The cable (included with WeatherLink) distance between an Envoy and a computer is 8' (2.4 m) using a USB connection. Multiple receivers (Envoys and consoles) can "listen" to the same station or set of stations.

