


# Vantage PRO2™ INSTALLATION DIAGRAM

## Vantage Pro2™ Console Retransmitting Data to a Weather Envoy™

This diagram shows a Vantage Pro2 sensor suite wirelessly connected to both a Vantage Pro2 console and a Weather Envoy, which is connected to a computer via a WeatherLink data logger. The sensor suite is transmitting to the console. The console is retransmitting the data to the Weather Envoy. The transmission distance between a sensor suite and Envoy, and between Envoy and a console is up to 1000' (300 m) line-of-sight, or up to 600' (180 m) through walls and other obstructions. The cable (included with WeatherLink) distance between an Envoy and a computer is 8' (2.4 m) using a USB connection. Multiple receivers (both Envoy and consoles) can "listen" to the same station or set of stations.

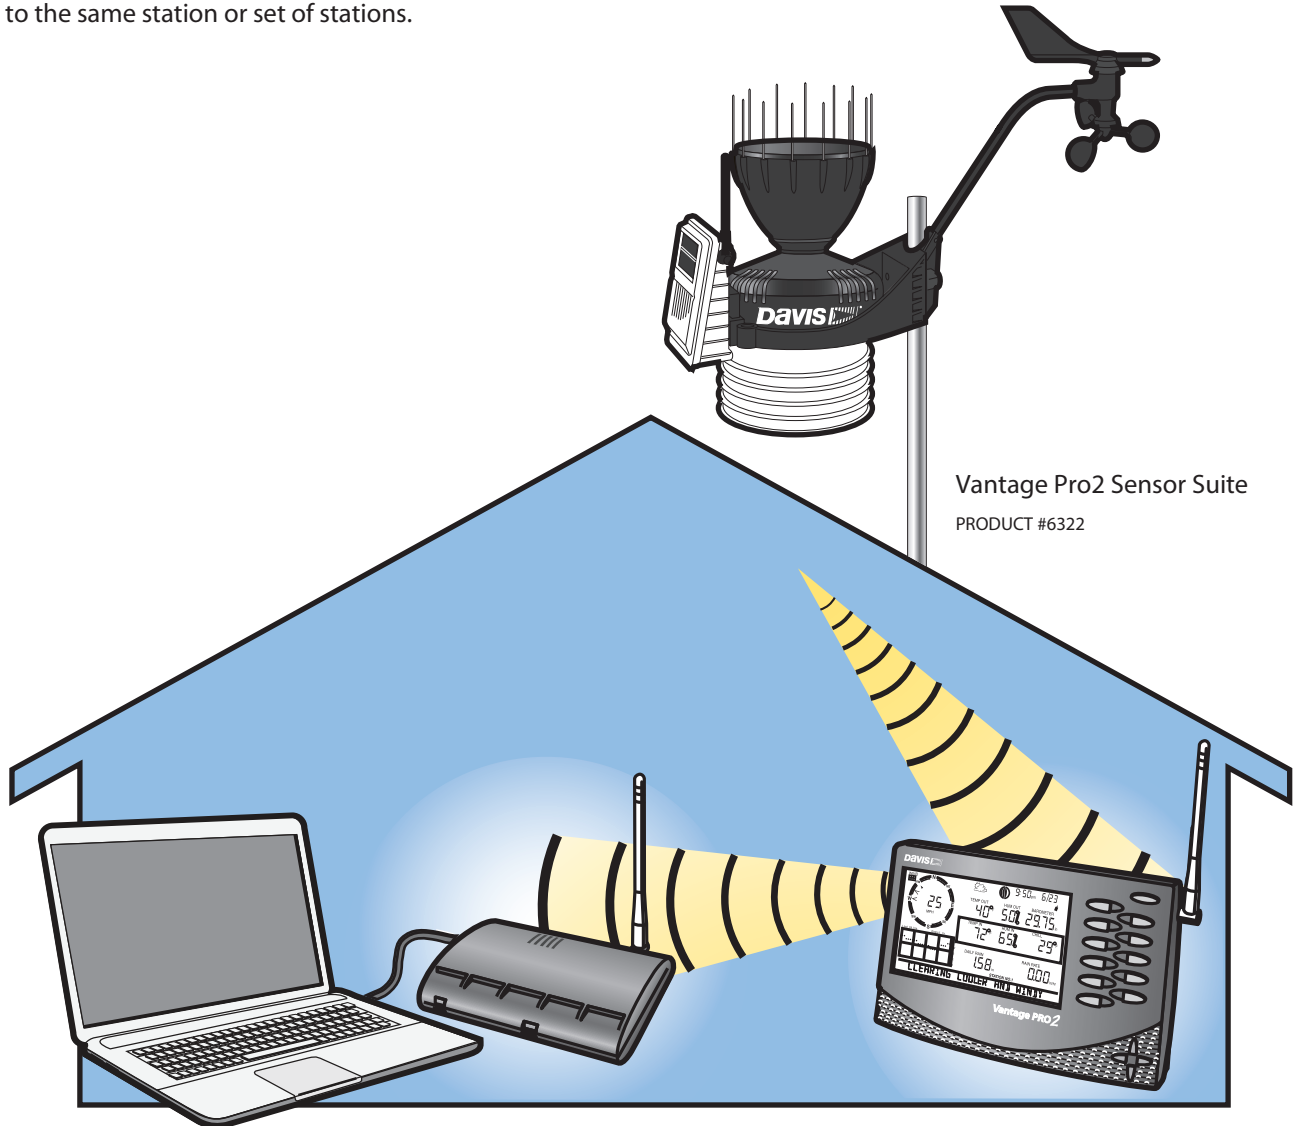

Vantage Pro2 Sensor Suite  
PRODUCT #6322

Weather Envoy  
PRODUCT #6316  
AND  
WeatherLink  
PRODUCT #6510SER or 6520

Vantage Pro2 Console  
PRODUCT #6312